



Hardy Shaker Accessory Kit

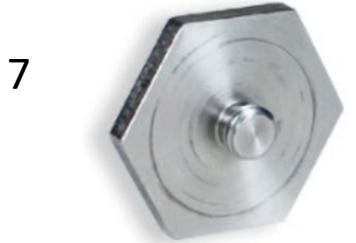

1. 3 Mounting studs, 1/4-28 to 1/4-28 x 0.365" long
2. 3 Mounting studs, 10-32 to 1/4-28 x 0.30" long
3. 3 Mounting studs, 5-40 to 5-40 threads, without shoulder
4. 3 Thread adaptors, 10-32 internal thread x 1/4-28 external thread
5. 3 Thread adaptors, 6-32 internal thread x 1/4-28 external thread, stainless steel
6. Calibration mounting adaptor: 0.625" hex flat base for sensors with 5-40 integral stud, stainless steel. For 1/4-28 threaded shakers
7. Calibration mounting adaptor: 1" hex flat base for adhesive mounting sensors, stainless steel. For 1/4-28 threaded shakers
8. Calibration mounting adaptor: Circular plate for 3 and 4-hole bolt pattern high-temp vibration sensors with:
 - Triangular hole patterns on a 1.00" (25.4mm) diameter circle, uses a 4 40 mounting thread.
 - Triangular hole patterns on a 1.20" (30.5mm) diameter circle, uses an 8 32 mounting thread.
 - Square hole patterns on a 1.375" (35mm) diameter circle, uses a 6 32 mounting thread.
 - Square bolt pattern with holes 1.19" (30.2mm) apart on all sides, uses a 1/4 28 mounting thread.
9. Calibration mounting adaptor: Circular plate for 3 and 4 hole bolt pattern high-temp vibration sensors with:
 - Triangular hole pattern on a 1.19" (30.2mm) diameter circle, uses an M4x0.7 mounting thread.
 - Square bolt pattern with holes 1.18" (30mm) apart on all sides, uses an M6x1.0 mounting thread.
10. Universal Transducer Adaptor Circular Plate: Circular plate for custom mounting holes to be drilled and tapped. Includes 1.75" diameter x 0.25" deep generic mounting pad (stainless steel), 1/4-28 flat head cap screw, and a 5/32" hex wrench
11. Mounting Wrench
12. Accessory Pouch
13. Loctite 454 - Quick bond Gel (for use with accelerometer adhesive mounting bases to fill gaps on rough surfaces)

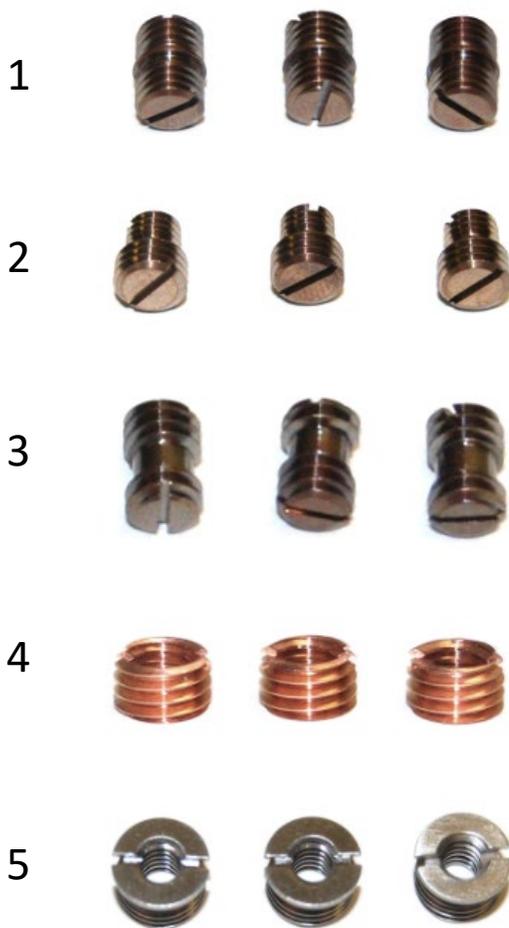